



## Part List of KM0406120

No.	Description in Chinese	Description in English	QTY
1	电瓶夹 (正极)	nip	1
2	电瓶夹 (负极)	nip	1
3	长电缆线	Long Cable	1
4	电缆接头部件	Cable Connector Parts	1
5	短电缆线	Short Cable	1
6	螺钉 M4×12	Screw M4×12	2
7	防护罩	shield	2
8	螺母 M4	Nut M4	4
9	电缆压板	Cable clips	3
10	螺钉 M4×16	Screw M4×16	16
11	保险丝	fuse	1
12	保险丝座盖部件	Fuse Block Parts	1
13	螺母	Nut	1
14	开关	Switches	1
15	右手柄	Handle	1
16	左手柄	Handle	1
17	弹簧线	Spring Line	1
18	长铝管	Long tubes	1
19	调节套座	Block conditioning sets	1
20	调节套	Conditioning sets	1
21	O型圈	O-ring	1
22	定位套	Positioning sets	1
23	短铝管	Short tubes	1
24	内六角沉头螺钉 M6	Socket head screws M6	4
25	轴套	Bushings	4
26	右机壳	The right chassis	1
27	右防尘盖	Right Shield	1
28	自攻螺钉 ST2.9×10	Self-tapping screws ST2.9×10	2
29	自攻螺钉 ST2.9×18	Self-tapping screws ST2.9×18	1
30	耙	Rake	2
31	防松螺帽 M5	Pine Nut M5	5
32	平垫 Ø 5	pad Ø 5	5
33	626 轴承	Bearing 626	4
34	大钢套	Big steel	2
35	耙头芯轴	Rake core Shaft	2
36	小钢套	Small Steel	4
37	链条接头部件	Chain connector Parts	2
38	连接销	Connecting pin	1
39	短连杆	Short Linkage	1
40	电机	Motor	1
41	平面滚针部件	Needle Plane Parts	1

